


## PULSE MONITOR CONNECTIONS

PM2-120 FOR 120/208V SERVICE

PM2-277 FOR 277/480V SERVICE

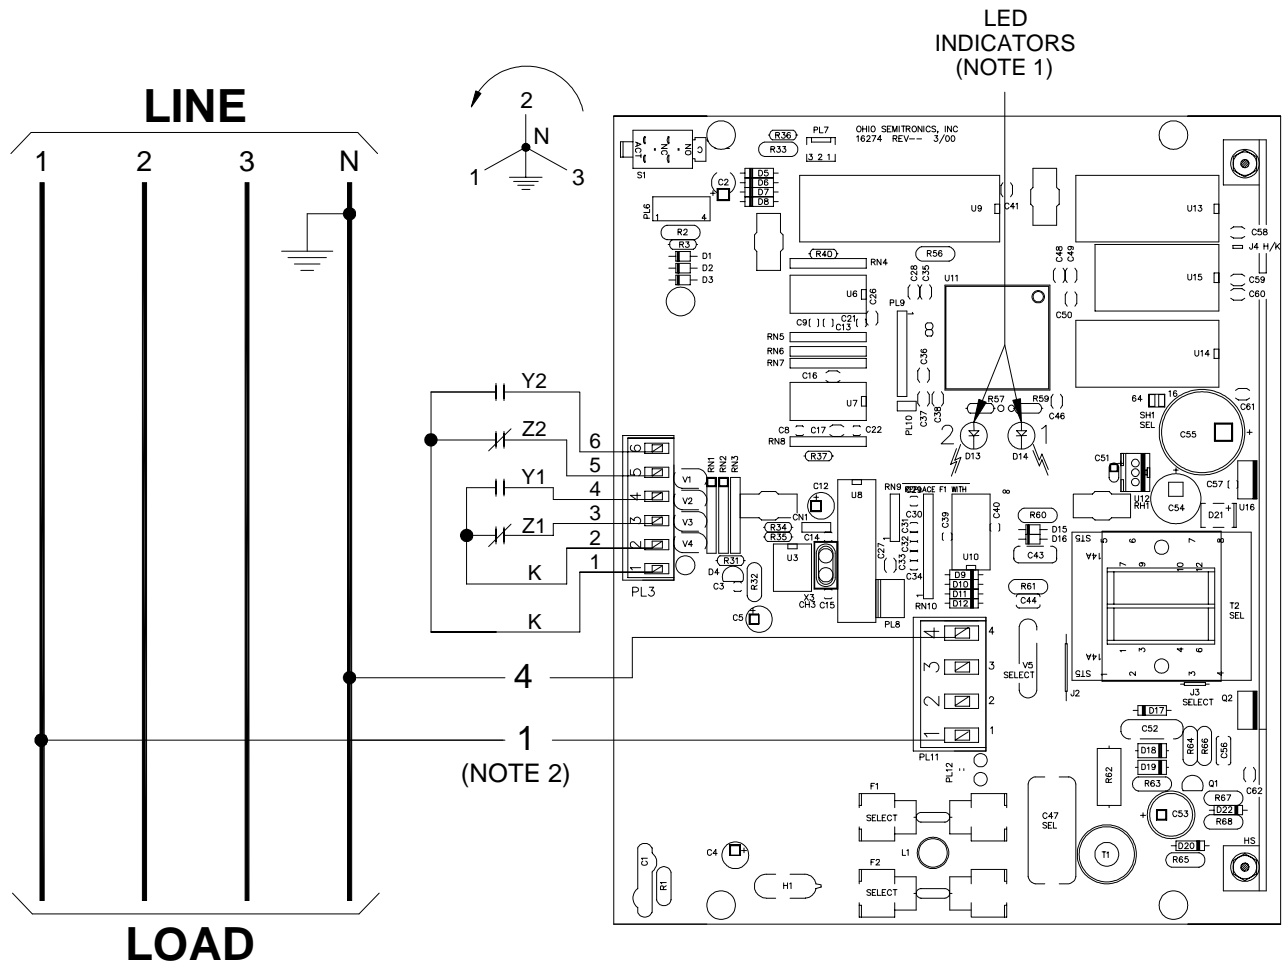

### NOTES:

1. LED Pulse Indicators switch between on and off to indicate pulse.
2. Connect Pin 1 (ac hot) to phase used for powerline communication.  
Line 1 is usually selected for standardization.