


PULSE MONITOR CONNECTIONS

PM-120 FOR 120/208V SERVICE

PM-277 FOR 277/480V SERVICE

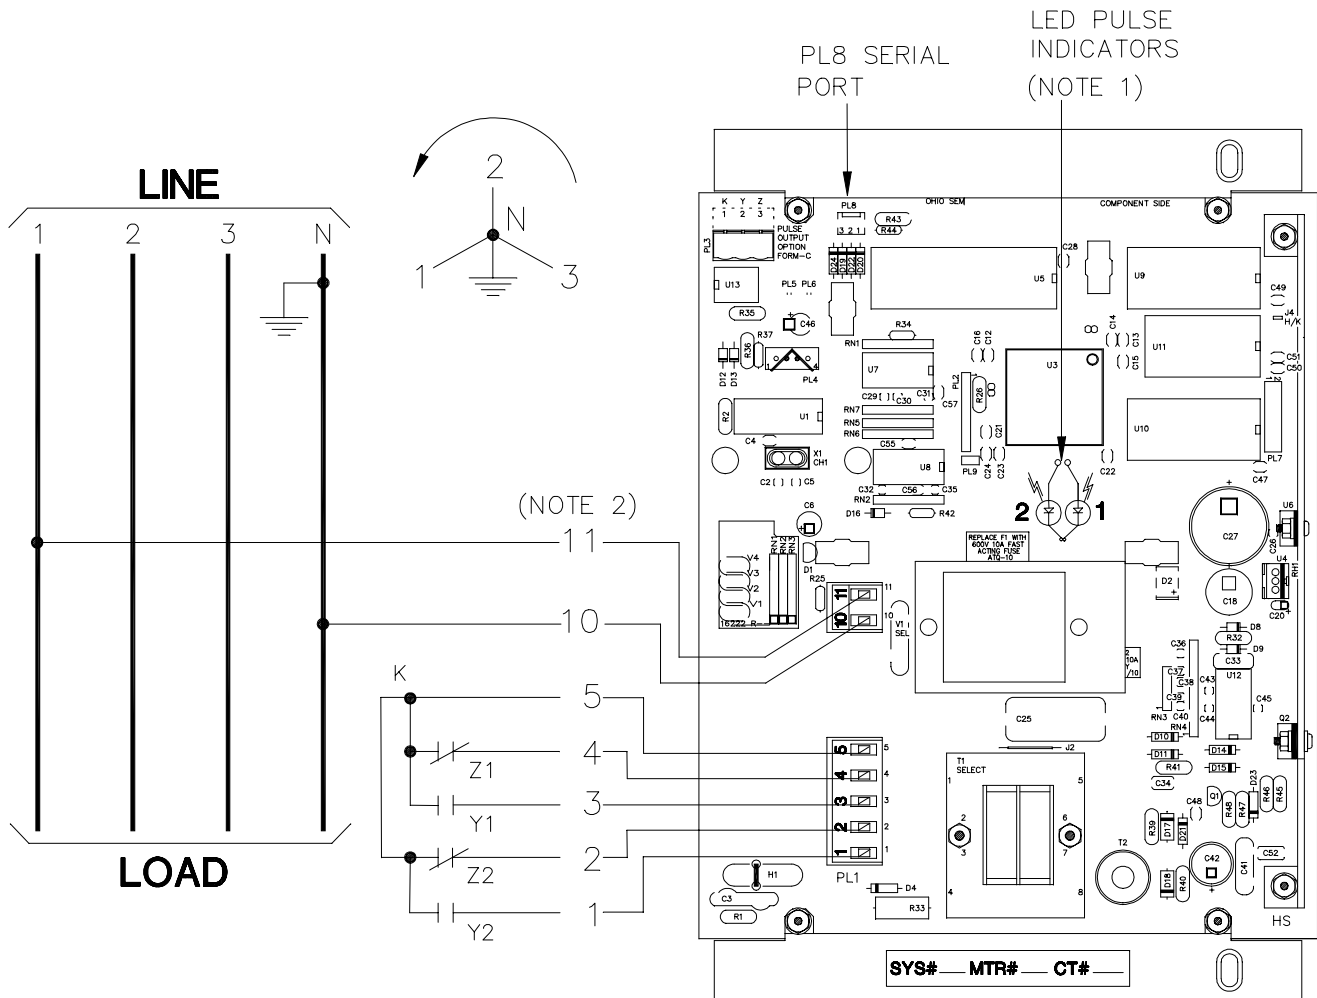

NOTES:

1. LED Pulse Indicators switch between on and off to indicate pulse.
2. Connect Pin 11 (ac hot) to phase used for powerline communication.
Line 1 is usually selected for standardization.